



Here is the modification for clip whips. Using a 3 blade 110 volt male end (from Home Depot) and using some zip cord or speaker wire. About ten feet for each pad should be fine. Make it longer if you want. Wire one wire from each set of zip cord to the ground terminal of the 110 male connector (one each of the wires from pad 1 and pad two). Then the remaining two wires will be connected to one each of the remaining terminal blades. See drawing for details. Make sure to test the you have the correct pad connector terminal wired correctly. This way when you push the launch button for pad 1 the rocket on pad 1 launches not the second rocket on pad two. That's it.